

# **Alarm System**

## **Manual**

Brookhaven National Laboratory  
Version 1.4

By Peter Kravtsov (E-mail: [PAKravtsov@lbl.gov](mailto:PAKravtsov@lbl.gov))

This document location: [http://www-rnc.lbl.gov/~pkravt/pdf/alarm\\_manual.pdf](http://www-rnc.lbl.gov/~pkravt/pdf/alarm_manual.pdf)

May 2000



as fast as in 0.8 s in this case. Alarm system can be connected to PC via standard RS-232 port.



*To change blocking of any particular alarm one should enter the number of this alarm (01÷32) and press [\*] button on keypad, while [#] button unblocks current alarm. One can block or unblock all alarms together by entering “79” as alarm number and pushing [\*] or [#] button (Total Blocking) .*

## Alarms handling

Alarms handling algorithm is shown in Fig.2. Each analog signal is read by the CPU, averaged by certain samples, and compared with the threshold with an appropriate sign of comparison (“<” or “>”). If an alarm occurred at this signal (analog value exceeds the threshold), the program lights correct LED. Then it takes into account the blocking status of the current alarm. If alarm is not blocked, software takes appropriate action by changing the **default state** of the digital outputs. In case of the blocked alarm, program just lights both LED for this alarm (ALARM LED and BLOCK LED) and tries to return digital outputs to **default state**, if it's allowed by other channels. If alarmed analog signal returns to it's normal range, system tries to return digital outputs to **non-alarm state**, again considering other alarmed channels.



*The DEFAULT state is a special digital outputs pattern, which allows full control of the gas system by a computer. In this state, if computer doesn't switch on any device, no devices are switched on; but computer is able to turn on any of them. In other words, Alarm System doesn't lock any device. This means that in case of total blocking (code 79) gas system becomes fully controllable by a PC.*

The idea was as follows. If alarm is not blocked and there is an alarm situation in some channel (some parameter exceeds the threshold) the code changes the **default state** of the digital outputs only in the memory, and stores

in the memory which outputs it changed. If there is no alarm, the code changes only those outputs, which were not alarmed by the previous channels, making use of the stored list of the changed outputs. So the outputs which changed their states because of the alarm are not affected by the alarm recovery procedure, if we consider a single processing (handling) cycle. Only after processing of all the channels the result of their influence upon the digital outputs really comes out of the memory. This eliminates wrong digital output states and “flashing” of these signals.

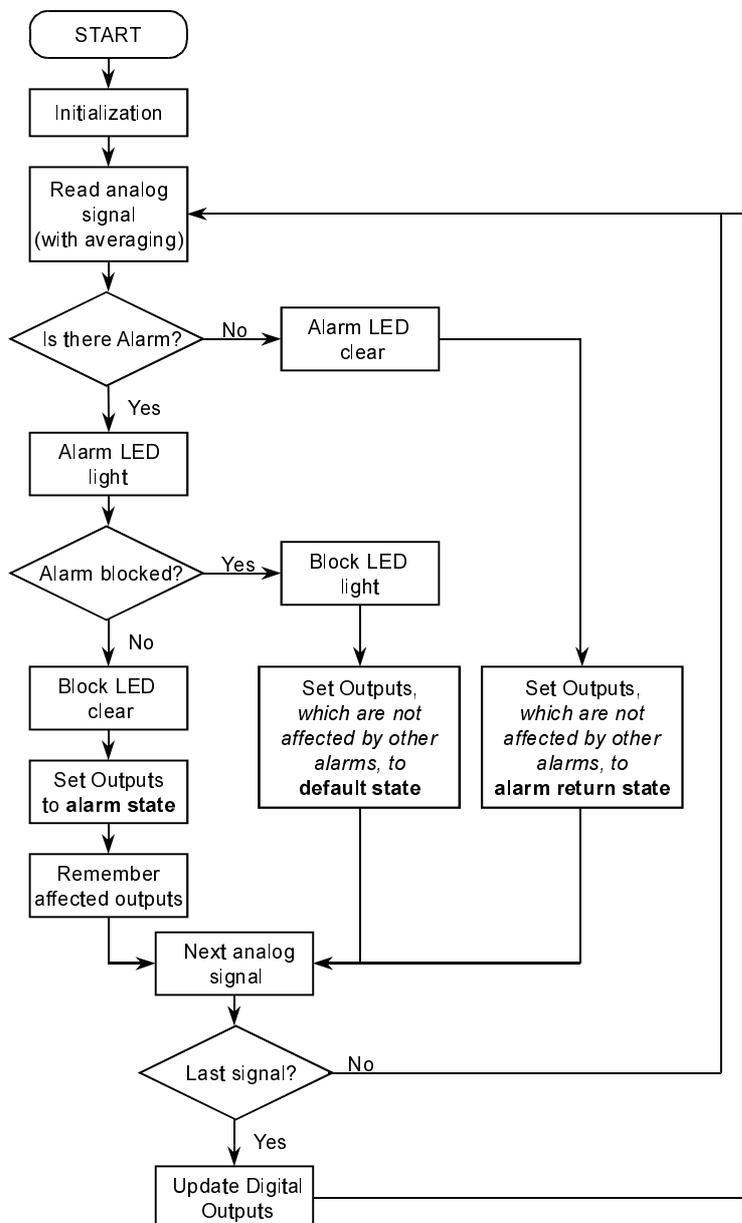


Fig. 2. Alarms handling algorithm

## PC software and alarms configuration

Alarm System provides reliable RS-232 data exchange in order to change alarms configuration and reading system status. The software for PC is developed for Windows platform. The window of this program has four tabs: one for reading Alarm System status (Fig. 3), second for configuring alarms (Fig. 4), third for Analog Inputs test (Fig. 5), and fourth for valves configuration (Fig. 7).

The “System parameters” tab includes small communication setup. User must select COM port connected to Alarm System. The speed of data exchange is always set to 19200b/s. Program *will not communicate* with Alarm System without connecting to appropriate COM port. If program detects an

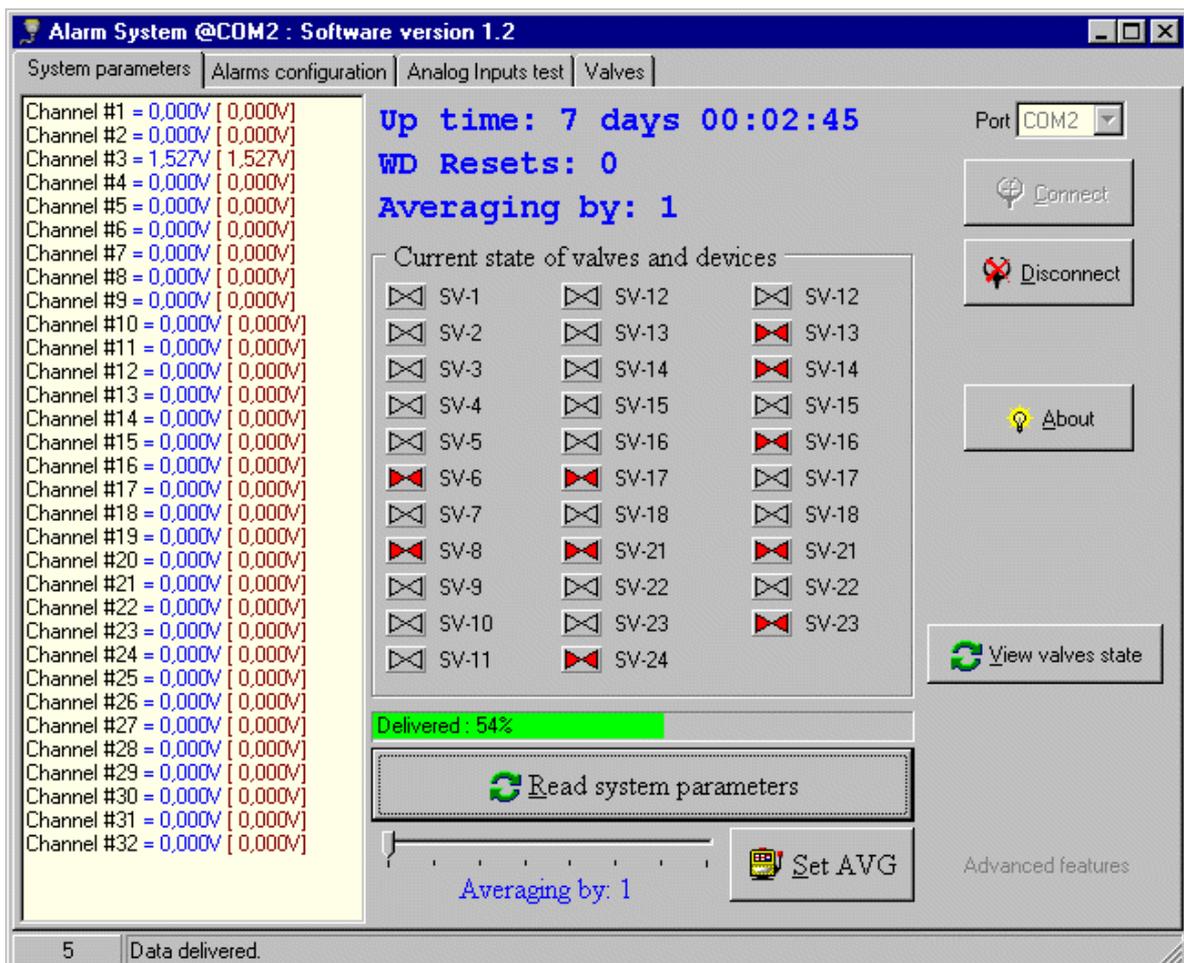


Fig. 3. “System parameters” tab.

Alarm System connected to specified port, it displays internal software version of this system. Port will be automatically disconnected in 10 seconds if no Alarm System observed on this port. The “Read system parameters” button reads Alarm System status information. It updates the following parameters:

- **Up time** – the time since last power-up,
- **WD resets** – watch-dog counter, number of WD resets since last power-up,
- **Averaging by** – number of analog signal samples to average by,
- **Valves state** – current state of all devices connected to Alarm System
- **Physical values and voltages** of analog signals.



*The “Valves and devices state” box may be used to manual control each particular device, but will not affect devices, activated by an alarm. Actually it changes the DEFAULT state, so be careful with this control. Current DEFAULT state will be shown in this window, if one reads system parameters of total blocked (code 79) Alarm System, because in this case actual state of all digital outputs is the same as in the DEFAULT state.*

Besides, user can change averaging number using a trackbar at bottom of the window and “Set AVG” button. This value will be taken into account in the next alarm handling cycle. Time required for one 32-channel cycle as function of averaging number is given in table 1.

Table 1. Cycle time for different averaging numbers

Average by	Time, ms
1	22
2	30
4	42
8	68
16	120
32	220
64	420
128	800

The “Alarms configuration” tab (Fig.4) is used to configure alarms and actions to be taken in case of any particular alarm. For every alarm user is able to change:

- **Alarm event name** – this string is used only in the PC program for better understanding what this alarm is used for, instead of numbers in Alarm System
- **Level** – alarm threshold. Exceeding this threshold analog signal value causes an alarm
- **Unit** – only in PC program, units of physical value of this analog signal
- **KA** – A coefficient for calculating physical value from voltage. PC only
- **KB** – B coefficient for calculating physical value from voltage. PC only
- **Devices configuration** – alarm action, see further description
- **Alarm threshold sign** – alarm comparison sign

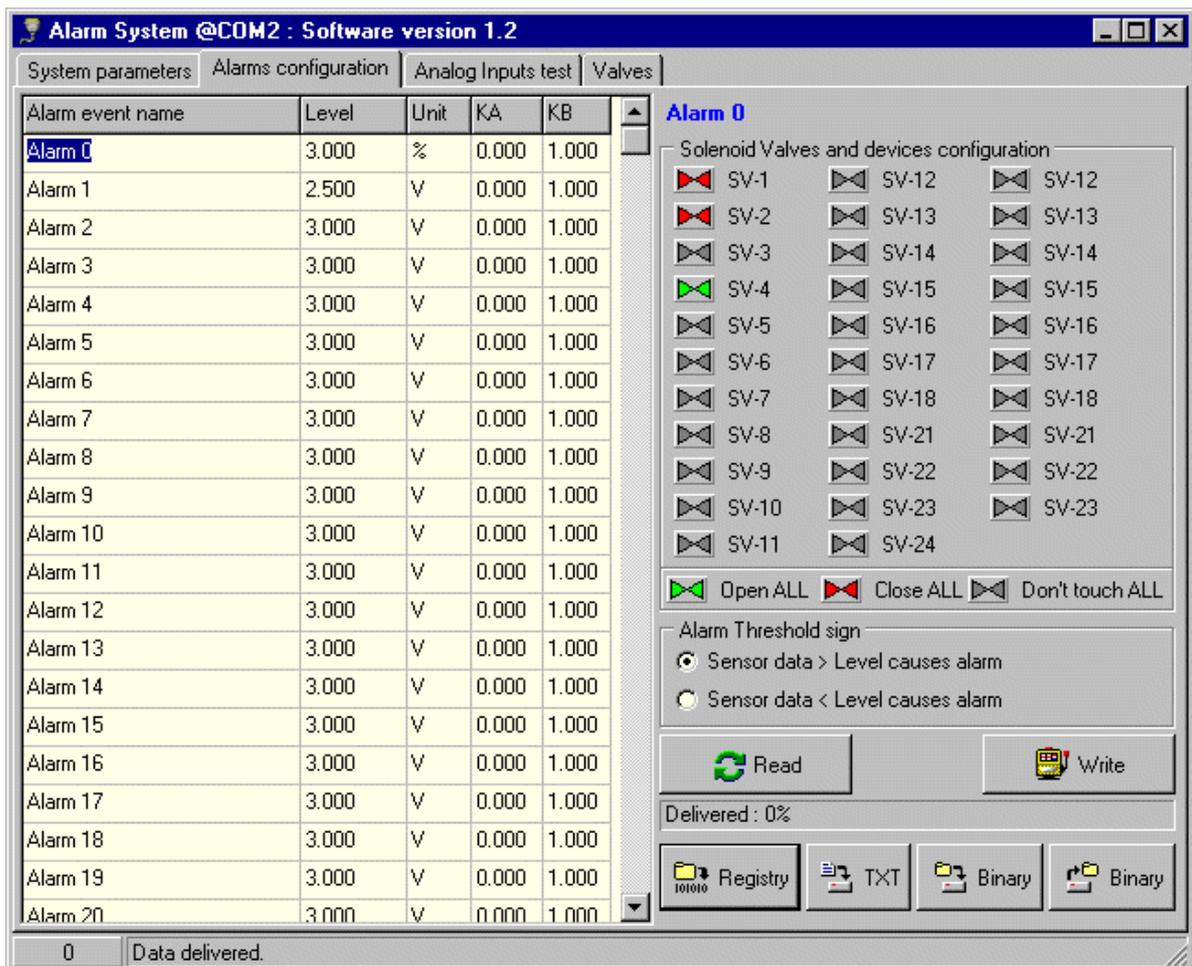


Fig. 4. “Alarms configuration” tab.

Alarm names, physical value units, coefficients are intended to appear only in PC program. Voltage is calculated from physical value by the formula:  $S = (V - KA) \cdot KB$ , where S is physical value, V - voltage, KA and KB – coefficients.

Solenoid valves and devices configuration allows one to customize the alarm action. If an alarm occurred, the *red* valves will be closed and *red* devices will be turned off. *Green* valves will be open, *green* devices will be turned on. *Gray* valves and devices *will not be affected* in case of this particular alarm. For example, in the valves configuration showed on Fig. 4, SV-1 and SV-2 will be closed, SV-4 will be open while all other valves will not be affected, i.e. their state will be intact.

“Read” button downloads current alarm configuration from Alarm System, “Write” button uploads it to Alarm System. *Note that COM port should be open before these operations.* User can save current configuration to Registry (it is done automatically when window closes), save and load it to/from binary file. Besides, “TXT” button exports alarm configuration to text file as table with alarms in rows and valves state in columns, which can be extremely useful for analyzing in MS Excel to see the whole configuration of all the alarms on one page.

## Analog Inputs test

There is special feature implemented in the software to check noise protection of analog input channels (Fig. 5). When this mode is activated, Alarm System CPU is sending all 32 digitized and averaged analog signals once per alarm handling cycle. The number of such samples is given by PC software and may not exceed 255 (restricted to  $10 \div 100$  by PC software). This allows one to investigate dependence of the statistical error on averaging constant.

The results of the averaged sample measurements are shown on Fig. 6 and Table 2. It is obvious that dispersion decreases with increasing number of samples which signal is averaged by. There is no necessity to increase it

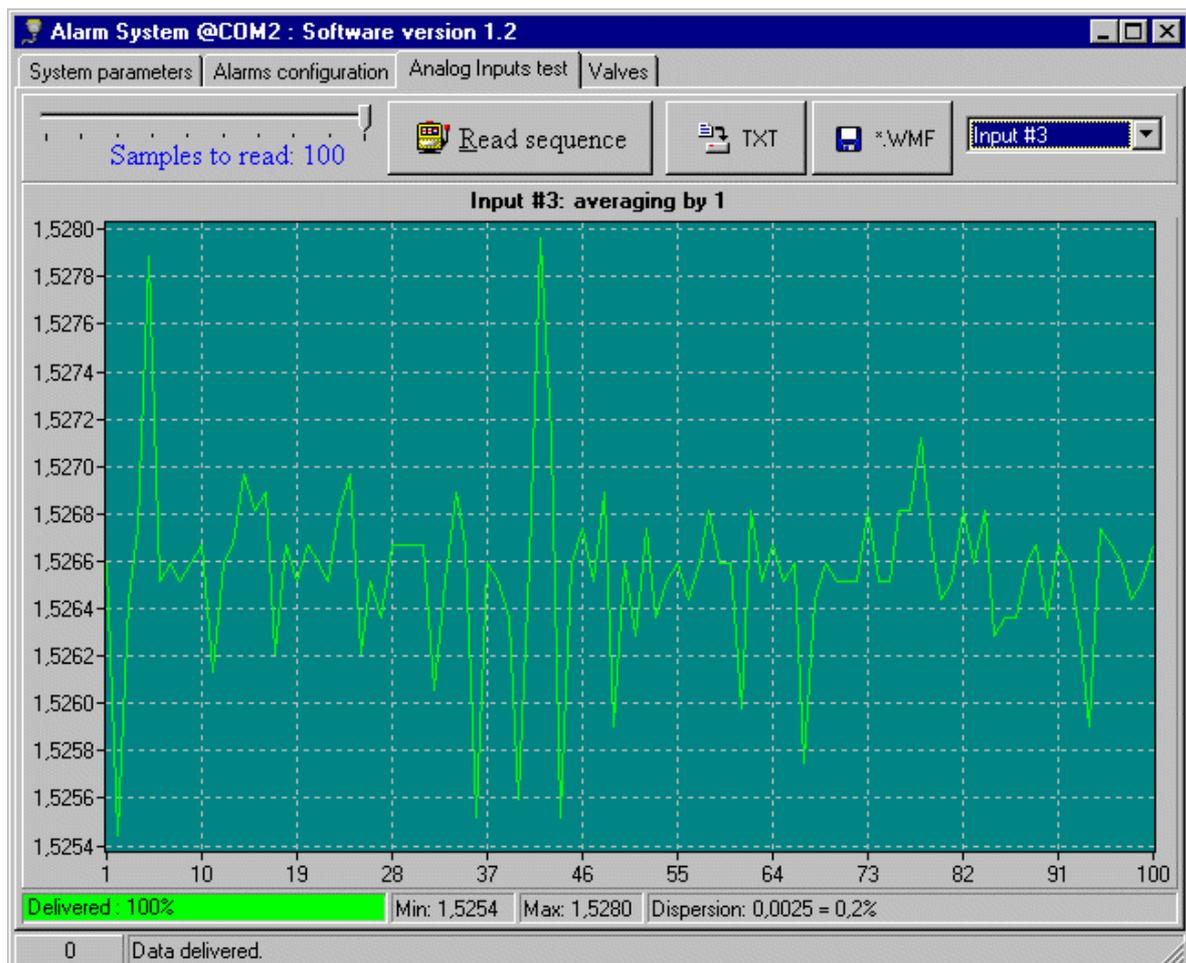


Fig. 5. “Analog Inputs test” tab.

over 32 for signals with low noise, because the dispersion is almost constant there. Besides, measured value goes higher with increasing averaging number, which is regular and reflects a calculation error during averaging. That is not important for the Alarm System itself, because the shift of the values is negligible (1.5 mV) and comparable to measurement error 1 mV.

Table 2. Dispersion for different averaging numbers

Average by	1	2	4	8	16	32	64	128
Dispersion, ADC units	23	18	13	9	6	3	4	2
Dispersion, mV	1.75	1.37	0.99	0.69	0.46	0.23	0.31	0.15

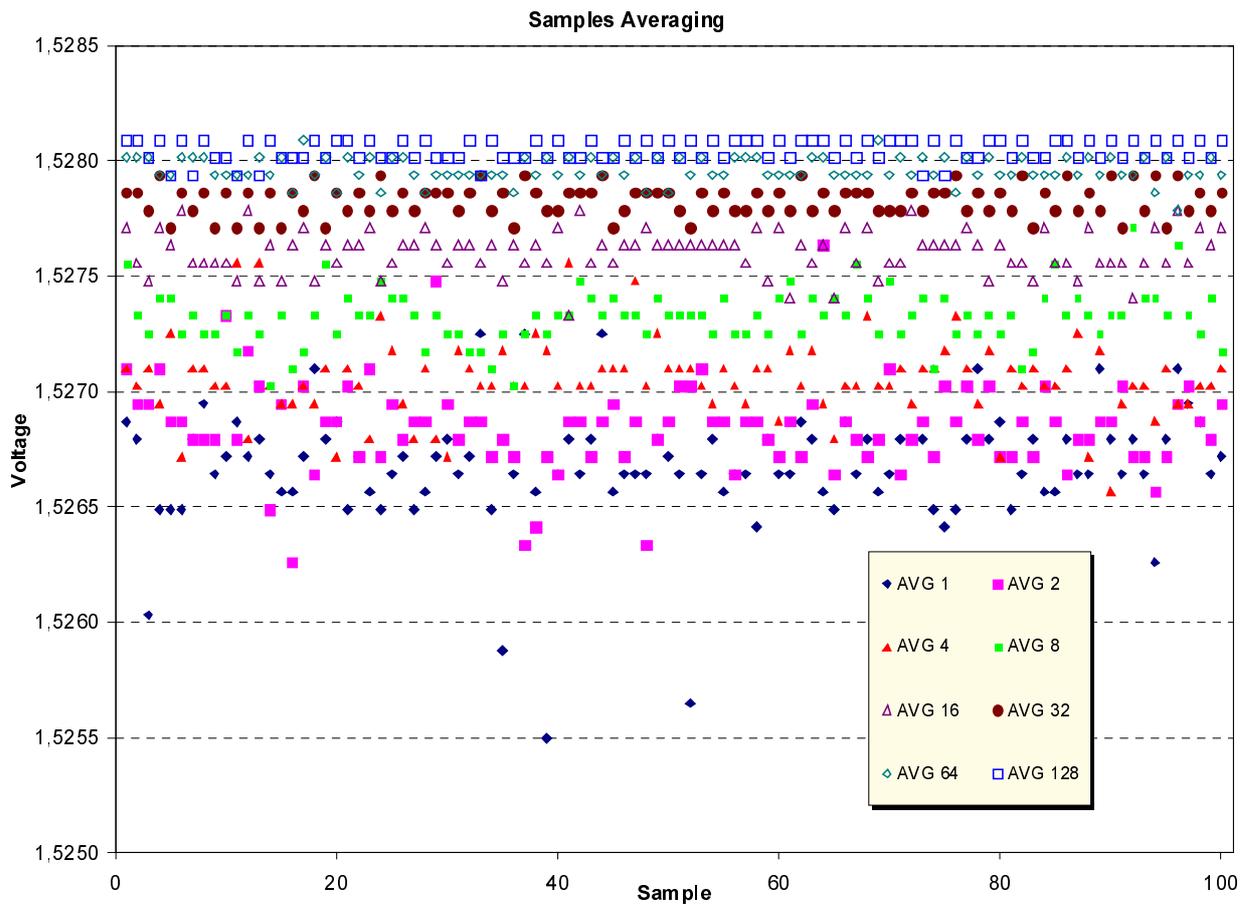


Fig. 6. Samples with different averaging.

## Valves configuration

In order to make alarms setup easier, the software operates real valve names and properties. This information may be changed on “Valves” tab (Fig. 7). For each valve user can set name and type of valve (or device): normally closed or normally open. For devices open state means turned on while closed state means turned off. All information can be stored in registry or saved/loaded into/from binary file.

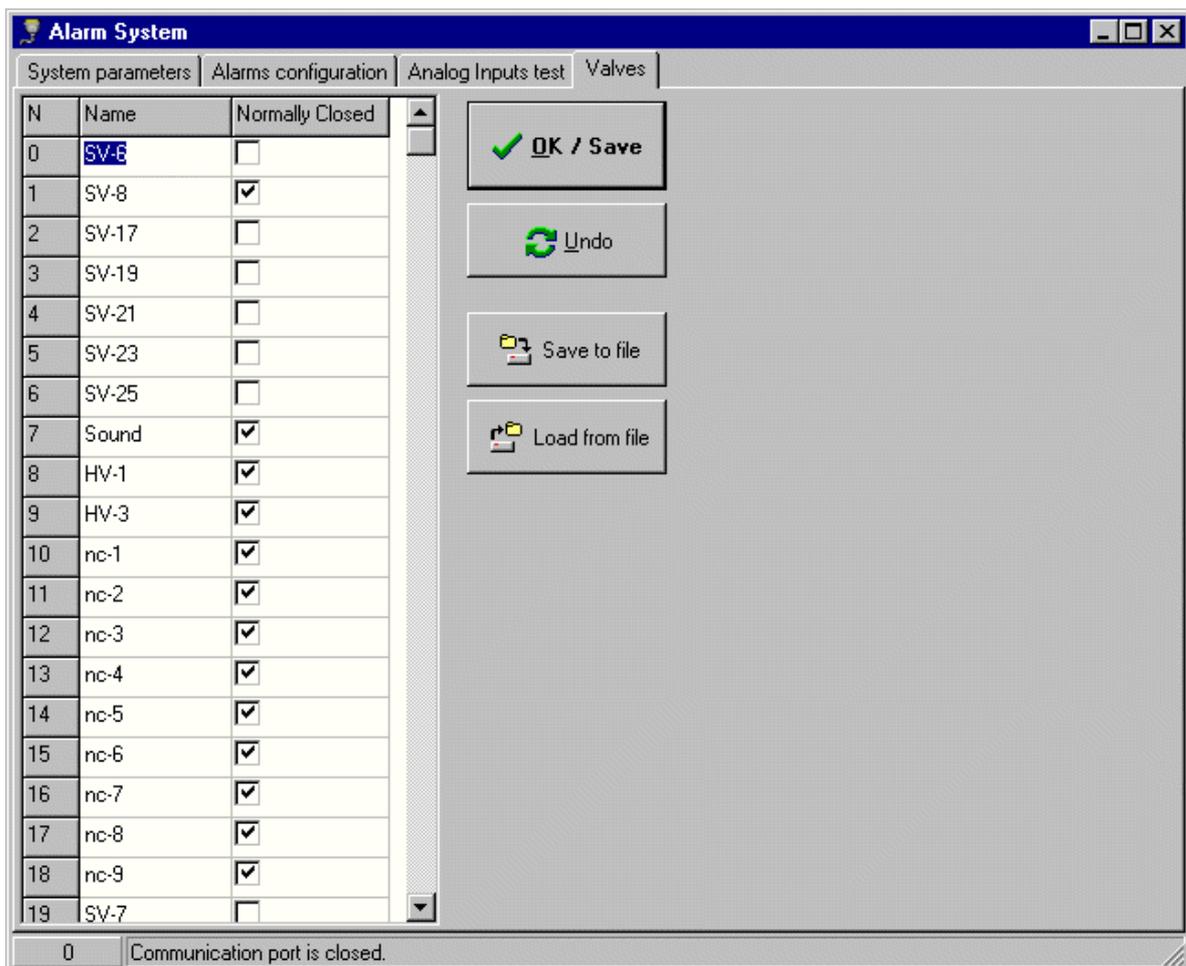


Fig. 7. Valves setup.

## Conclusion

During tests and measurements Alarm System appears to be very reliable and stable device. For instance, system had been worked over 7 days (Fig. 3) with no watchdog resets, i.e. no 8051 CPU software faults. Flexible alarm action configuration gives one a possibility to use it not only for Gas System, but also in any project that requires simple and fast interlock system. The main features of the Alarm system are:

- 32 analog input channels with 16-bit resolution
- 32 digital output channels (transistor switches)
- RS-232 interface at 19200 baud
- Separate and total alarm blocking from keypad on front panel
- 22 ms minimal response time (without averaging)
- Flexible alarm actions configuration for each particular alarm
- System information available via RS-232, including watchdog resets counter, up time, analog values and digital output status
- Analog inputs test mode for choosing convenient averaging number
- Power consumption - 15 mA for  $\pm 12$  V and 250 mA for 5 V with all LEDs lighted